

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitātes

Table with 16 columns: Feature, PF (FABER), IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include model info (S, M), efficiency metrics (AEC, FDE, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, PI, F, Qbep, P, Qmax, Wbep, WL, Emiddle, Lwa), and technical details (WL, Emiddle, Lwa). Each cell contains technical specifications and descriptions in multiple languages.

